

**Solista ES Rev. 1.1***Filler Menu***1 - STATISTICS**

- 1.1 - STATISTICS PRINTING
  - 1.1.1 - PARTIAL PRINTING
    - 1.1.1.1 - SELECT.COUNT. PRINT.
    - 1.1.1.2 - PRINT BAND COUNTER
    - 1.1.1.3 - DISCOUNT COUNT.PRIN.
    - 1.1.1.4 - FAILURE COUNT.PRINT.
    - 1.1.1.5 - COIN MECH.DATA PRINT
  - 1.1.2 - TOTAL PRINTING
- 1.2 - PRINT RELAT. STAT.
  - 1.2.1 - PARTIAL PRINTING
    - 1.2.1.1 - SELECT.COUNT. PRINT.
    - 1.2.1.2 - PRINT BAND COUNTER
    - 1.2.1.3 - DISCOUNT COUNT.PRIN.
    - 1.2.1.4 - FAILURE COUNT.PRINT.
    - 1.2.1.5 - COIN MECH.DATA PRINT
  - 1.2.2 - TOTAL PRINTING
- 1.3 - STATISTICS DISPLAY
  - 1.3.1 - SELECT. COUNT. DISP.
    - 1.3.1.1 - COUNT DISP. X S.SEL.
    - 1.3.1.2 - TOTAL COUNT DISPLAY
    - 1.3.1.3 - SEL.NO.COUNT. DISPL.
  - 1.3.2 - DISPLAY BAND COUNTER
  - 1.3.3 - DISCOUNT COUNT.DISP.
  - 1.3.4 - FAILURE COUNT. DISP.
  - 1.3.5 - COIN MECH.DATA DISP.
    - 1.3.5.1 - AUDIT DATA DISPLAY
    - 1.3.5.2 - CASH COUNT. DISPLAY
- 1.4 - DISPLAY RELAT. STAT.
  - 1.4.1 - SELECT. COUNT. DISP.
    - 1.4.1.1 - COUNT DISP. X S.SEL.
    - 1.4.1.2 - TOTAL COUNT DISPLAY
    - 1.4.1.3 - SEL.NO.COUNT. DISPL.
  - 1.4.2 - DISPLAY BAND COUNTER
  - 1.4.3 - DISCOUNT COUNT.DISP.
  - 1.4.4 - FAILURE COUNT. DISP.
  - 1.4.5 - COIN MECH.DATA DISP.
    - 1.4.5.1 - AUDIT DATA DISPLAY
    - 1.4.5.2 - CASH COUNT. DISPLAY
- 1.5 - DELETE RELAT. STAT.
  - 1.5.1 - PARTIAL RESET
    - 1.5.1.1 - SELECT. COUNT. RESET
    - 1.5.1.2 - DISCOUNT COUNT.RESET
    - 1.5.1.3 - FAILURE COUNT. RESET
    - 1.5.1.4 - COIN MECH DATA RESET
  - 1.5.2 - TOTAL RESET

**2 - INDIVIDUAL PRICE****3 - TUBE CONTROL**

- 3.1 - FILLING TUBE
- 3.2 - TUBE EMPTYING

**4 - BOILERS TEMPERATURE****5 - TEST**

- 5.1 - COMPLETE DISPENSING
- 5.2 - WATER ONLY
- 5.3 - POWDER ONLY
- 5.4 - WITHOUT ACCESSORIES
- 5.5 - ACCESSORIES ONLY

**6 - EVADTS**

- 6.1 - CONNECTION
- 6.2 - RESET PRE-ALARM CNT.
- 6.3 - PARTIAL RESET

# Solista ES Rev. 1.1

## Technician Menu

### 1 - PAYMENT SYSTEM 2 - PRICES

- 2.1 - INDIVIDUAL PRICE
- 2.2 - GLOBAL PRICES
- 2.3 - TIME SCHEDULE
  - 2.3.1 - TIME BAND 1
  - 2.3.2 - TIME BAND 2
  - 2.3.3 - TIME BAND 3
  - 2.3.4 - TIME BAND 4

### 3 - QUANTITY

- 3.1 - SELECTION PARAMETERS
- 3.2 - GLOBAL POWDER DOSES
- 3.3 - PUMPS SETTING
- 3.4 - DOSER SETTING
- 3.5 - KEYBOARD
  - 3.5.1 - SELECTION <-> BUTTON
  - 3.5.2 - CHECK NO. SELECTION
- 3.6 - WITHOUT SUGAR
- 3.7 - DEC. CYCLE

### 4 - DA CONFIGURATION

- 4.1 - SET DATE AND TIME
- 4.2 - BOILERS TEMPERATURE
- 4.3 - DB MANAGEMENT
  - 4.3.1 - INITIALISING DB
  - 4.3.2 - SAVE CUSTOM DB
  - 4.3.3 - RESTORE CUSTOM DB
- 4.4 - DISPLAY
  - 4.4.1 - LANGUAGE
  - 4.4.2 - PROMOTIONAL ADVERT.
    - 4.4.2.1 - ENABLE PROM. ADVERT.
    - 4.4.2.2 - SET PROMOT. ADVERT.
  - 4.4.3 - IMAGE ADVERT
  - 4.4.4 - CONTRAST CONTROL
  - 4.4.5 - COLORE LUCI STAND BY
  - 4.4.6 - MONEY SYMBOL
- 4.5 - MENU MANAGEMENT
  - 4.5.1 - PASSWORD
    - 4.5.1.1 - SET PASSWORD
    - 4.5.1.2 - ENABLE PASSWORD
  - 4.5.2 - ENABLE FILL MENU
  - 4.5.3 - DIRECT KEY STANDBY
  - 4.5.4 - FUNCTION DIRECT KEY
- 4.6 - GRUPPO ES
  - 4.6.1 - PREGRINDING
  - 4.6.2 - BOOST ESPRESSO
  - 4.6.3 - FONDI CAFFE
  - 4.6.4 - RES.FONDI CAFFE ACC.
  - 4.6.5 - GRINDER BLOCK
- 4.7 - WASHING
  - 4.7.1 - ENABLE AUTOM. WASH
  - 4.7.2 - LAVAG. GRUPPO AUTO.
  - 4.7.3 - BOOST SOLUBILI
  - 4.7.4 - MIXER COOLING
  - 4.7.5 - PASSWORD
    - 4.7.5.1 - MIXER WASHING
    - 4.7.5.2 - BREWER WASHING
  - 4.7.6 - SET MIXER+GR.ES WASH
- 4.8 - SET ACCESSORIES
  - 4.8.1 - TANK
  - 4.8.2 - PHOTOCCELL
  - 4.8.3 - JUG FACILITIES
  - 4.8.4 - PASSWORD RESET FONDI
  - 4.8.5 - PWD FREE VENDING
  - 4.8.6 - PWD JUG FACILITY
  - 4.8.7 - PWD BLOCCO TASTIERA
- 4.9 - CUP SETTling TIME
- 4.A - ENERGY SAVING
  - 4.A.1 - SET ENERGY SAVING
  - 4.A.2 - ENERGY SAV PARAMETER
  - 4.A.3 - PWD ENERGY SAVING
- 4.B - V.M. LED OUT OF SERV
- 4.C - MAINT.DISPENS.SETT.
- 4.D - C. UNIT ID SETTING
- 4.E - MASTER SLAVE
  - 4.E.1 - SETTING
  - 4.E.2 - SLAVE PRICE HOLDING
  - 4.E.3 - VIRT. PRICE RETURN
  - 4.E.4 - RESET MINISLAVE
  - 4.E.5 - MONITOR SLAVE

# Solista ES Rev. 1.1

## Technician Menu

|                       |                            |                              |                                 |
|-----------------------|----------------------------|------------------------------|---------------------------------|
|                       | 4.F - DA REGISTER CODE     |                              | 4.E.6 - SLAVE INFO DISPLAY      |
|                       | 4.G - OPER. CODE ENTRY     |                              |                                 |
|                       | 4.H - DA LOCATION CODE     |                              |                                 |
|                       | 4.I - INSTALLATION DATE    |                              |                                 |
|                       | 4.J - FAN CONTROL          |                              |                                 |
|                       | 4.K - NUM. MAX COUNTER     |                              |                                 |
|                       | 4.L - PWD RESET COUNTER    |                              |                                 |
|                       | 4.M - GSM PRE-ALARMS       |                              |                                 |
|                       |                            | 4.M.1 - SET GSM THRESHOLDS   |                                 |
|                       |                            | 4.M.2 - RESET PRE-ALARM CNT. |                                 |
| <b>5 - TEST</b>       |                            |                              |                                 |
|                       | 5.1 - TEST DISPENSING      |                              |                                 |
|                       |                            | 5.1.1 - COMPLETE DISPENSING  |                                 |
|                       |                            | 5.1.2 - WATER ONLY           |                                 |
|                       |                            | 5.1.3 - POWDER ONLY          |                                 |
|                       |                            | 5.1.4 - WITHOUT ACCESSORIES  |                                 |
|                       |                            | 5.1.5 - ACCESSORIES ONLY     |                                 |
|                       | 5.2 - SPECIAL FUNCTIONS    |                              |                                 |
|                       |                            | 5.2.1 - ESPR. UNIT ROTATION  |                                 |
|                       |                            | 5.2.2 - RELEASE DOSE         |                                 |
|                       |                            | 5.2.3 - EMPTY ESPR. BOILER   |                                 |
|                       |                            | 5.2.4 - MANUAL INSTALLATION  |                                 |
|                       |                            | 5.2.5 - BREWER ROTATION      |                                 |
|                       |                            |                              | 5.2.5.1 - ESPR. UNIT ROTATION   |
|                       |                            |                              | 5.2.5.2 - PRESSURE PISTON       |
|                       |                            |                              | 5.2.5.3 - COFF. UNIT MAN. WASH. |
|                       | 5.3 - AUTOTEST             |                              |                                 |
| <b>6 - STATISTICS</b> |                            |                              |                                 |
|                       | 6.1 - ELECTRONIC COUNTER   |                              |                                 |
|                       |                            | 6.1.1 - DISPLAY COUNTERS     |                                 |
|                       |                            | 6.1.2 - RESET COUNTER        |                                 |
|                       |                            | 6.1.3 - EN. COUNTER AT START |                                 |
|                       | 6.2 - EVADTS               |                              |                                 |
|                       |                            | 6.2.1 - COMMUNICAT.PROTOCOL  |                                 |
|                       |                            | 6.2.2 - DATA TRANSMISSION    |                                 |
|                       |                            | 6.2.3 - EVADTS TYPE          |                                 |
|                       |                            | 6.2.4 - SERIAL BAUDRATE      |                                 |
|                       |                            | 6.2.5 - CONNECTION           |                                 |
|                       |                            | 6.2.6 - STATISTICS RESET     |                                 |
|                       |                            |                              | 6.2.6.1 - PARTIAL RESET         |
|                       |                            |                              | 6.2.6.2 - TOTAL RESET           |
|                       | 6.3 - STATISTICS DISPLAY   |                              |                                 |
|                       |                            | 6.3.1 - SELECT. COUNT. DISP. |                                 |
|                       |                            |                              | 6.3.1.1 - COUNT DISP. X S.SEL.  |
|                       |                            |                              | 6.3.1.2 - TOTAL COUNT DISPLAY   |
|                       |                            |                              | 6.3.1.3 - SEL.NO.COUNT. DISPL.  |
|                       |                            | 6.3.2 - DISPLAY BAND COUNTER |                                 |
|                       |                            | 6.3.3 - DISCOUNT COUNT.DISP. |                                 |
|                       |                            | 6.3.4 - FAILURE COUNT. DISP. |                                 |
|                       |                            | 6.3.5 - COIN MECH.DATA DISP. |                                 |
|                       |                            |                              | 6.3.5.1 - AUDIT DATA DISPLAY    |
|                       |                            |                              | 6.3.5.2 - CASH COUNT. DISPLAY   |
|                       | 6.4 - STATISTICS RESET     |                              |                                 |
|                       |                            | 6.4.1 - PARTIAL RESET        |                                 |
|                       |                            |                              | 6.4.1.1 - SELECT. COUNT. RESET  |
|                       |                            |                              | 6.4.1.2 - DISCOUNT COUNT.RESET  |
|                       |                            |                              | 6.4.1.3 - FAILURE COUNT. RESET  |
|                       |                            |                              | 6.4.1.4 - COIN MECH DATA RESET  |
|                       |                            | 6.4.2 - TOTAL RESET          |                                 |
|                       | 6.5 - DISPLAY RELAT. STAT. |                              |                                 |
|                       |                            | 6.5.1 - SELECT. COUNT. DISP. |                                 |
|                       |                            |                              | 6.5.1.1 - COUNT DISP. X S.SEL.  |
|                       |                            |                              | 6.5.1.2 - TOTAL COUNT DISPLAY   |
|                       |                            |                              | 6.5.1.3 - SEL.NO.COUNT. DISPL.  |
|                       |                            | 6.5.2 - DISPLAY BAND COUNTER |                                 |
|                       |                            | 6.5.3 - DISCOUNT COUNT.DISP. |                                 |
|                       |                            | 6.5.4 - FAILURE COUNT. DISP. |                                 |
|                       |                            | 6.5.5 - COIN MECH.DATA DISP. |                                 |
|                       |                            |                              | 6.5.5.1 - AUDIT DATA DISPLAY    |
|                       |                            |                              | 6.5.5.2 - CASH COUNT. DISPLAY   |
|                       | 6.6 - DELETE RELAT. STAT.  |                              |                                 |
|                       |                            | 6.6.1 - PARTIAL RESET        |                                 |
|                       |                            |                              | 6.6.1.1 - SELECT. COUNT. RESET  |
|                       |                            |                              | 6.6.1.2 - DISCOUNT COUNT.RESET  |
|                       |                            |                              | 6.6.1.3 - FAILURE COUNT. RESET  |
|                       |                            |                              | 6.6.1.4 - COIN MECH DATA RESET  |
|                       |                            | 6.6.2 - TOTAL RESET          |                                 |
|                       | 6.7 - STATISTICS PRINTING  |                              |                                 |
|                       |                            | 6.7.1 - PARTIAL PRINTING     |                                 |
|                       |                            |                              | 6.7.1.1 - SELECT.COUNT. PRINT.  |
|                       |                            |                              | 6.7.1.2 - PRINT BAND COUNTER    |
|                       |                            |                              | 6.7.1.3 - DISCOUNT COUNT.PRIN.  |
|                       |                            |                              | 6.7.1.4 - FAILURE COUNT.PRINT.  |
|                       |                            |                              | 6.7.1.5 - COIN MECH.DATA PRINT  |
|                       |                            | 6.7.2 - TOTAL PRINTING       |                                 |
|                       | 6.8 - PRINT RELAT. STAT.   |                              |                                 |

# Solista ES Rev. 1.1

## Technician Menu

- 6.8.1 - PARTIAL PRINTING
    - 6.8.1.1 - SELECT.COUNT. PRINT.
    - 6.8.1.2 - PRINT BAND COUNTER
    - 6.8.1.3 - DISCOUNT COUNT.PRIN.
    - 6.8.1.4 - FAILURE COUNT.PRINT.
    - 6.8.1.5 - COIN MECH.DATA PRINT
  - 6.8.2 - TOTAL PRINTING
- 7 - COMMUNICATION**
- 7.1 - UPKEY
    - 7.1.1 - SETUP MANAGEMENT
      - 7.1.1.1 - UPKEY -> MACHINE
      - 7.1.1.2 - MACHINE -> UPKEY
      - 7.1.1.3 - DELETE
      - 7.1.1.4 - DELETE ALL
    - 7.1.2 - AUDIT MANAGEMENT
      - 7.1.2.1 - MACHINE -> UPKEY
      - 7.1.2.2 - DELETE
      - 7.1.2.3 - DELETE ALL
    - 7.1.3 - V.M. SELECTION
- 8 - FAILURES**
- 8.1 - FAILURE READING
  - 8.2 - FAILURE RESET
  - 8.3 - LAST FAULT
  - 8.4 - DELETE LAST FAULT